

# KRYPTONITE®

## Combo U-Lock

Kryptonite  
5 Shawmut Road  
Canton, MA 02021  
(781) 828-6655  
www.kryptonitelock.com



005292\_Parkview\_Combio\_U-lock\_Rev1025

7. If the slide release button (a) cannot be pushed to the right, or the shackle cannot be removed, set the dial back to 0-0-0-5 (factory setting) and repeat steps 1-5. If you are still unable to set the combination, please contact Kryptonite (1-800-SAY-LOCK).

For your convenience, Kryptonite recommends setting your combination only once, with a combination you will easily remember. **Save the setting tool and these instructions should you ever need to change your combination.**

Changing Your Combination:

\*To change your combination, repeat steps 1-5 using your new combination.

**To lock your Combo U-lock:**

1. Insert shackle into the crossbar. The shackle will snap into place, but the lock is not yet locked.
2. Rotate the numbered dials to scramble your combination sequence. This locks the lock. Check that the lock is secure by pulling on the crossbar.

### ADDITIONAL TERMS:



**NO OTHER WARRANTIES, EXPRESS OR IMPLIED, ARE MADE WITH RESPECT TO THE PRODUCTS INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

Kryptonite does not authorize any person to create for it any obligation or liability or additional warranty in connection with the Products. **Kryptonite's maximum liability under this warranty is limited to the purchase price of the Product.** No action arising out of any claimed breach of this warranty by Kryptonite may be brought by the Original User more than one (1) year after the cause of action has arisen.

### HOW STATE LAW APPLIES:

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

For warranty and shipping instructions contact:  
1-800-729-5625 (USA Only) or 1-781-828-6655

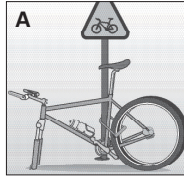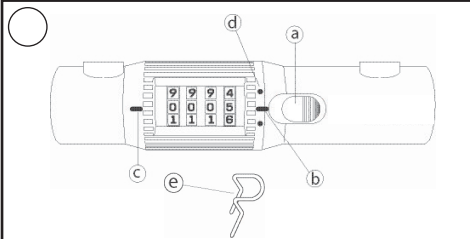

### PROPER BICYCLE LOCK UP

Place your bike against a well-anchored object, like a pole or parking meter, with chain ring facing out. Remove your front wheel and place it by your rear wheel. Place Kryptonite U-Lock shackle around the pole and through both seat stays (if frame size will allow) and the two wheels (see illustration A above). Check the lock before leaving your bike to be sure it is properly secured.

#### Remember:

1. Lock your bike in a well lit area
2. Lock your bike to an object that is securely bolted or cemented to the ground, and that has something affixed to the top to prevent thieves from lifting the lock over the top of the object
3. Position your lock with key mechanism facing down
4. Create a snug fit with wheels and frame so that there is little room in the U-portion of the lock for thieves' tools
5. Don't lock your bike to itself, or to objects that can be easily cut
6. Don't lock your bike in the same area all the time
7. Don't position lock near the ground to prevent thieves from attempting to leverage or crush the lock
8. Keep your bike locked at all times

### LIFETIME LIMITED WARRANTY:

Schlage Lock Company, LLC, through its Kryptonite division ("Kryptonite") extends a limited lifetime warranty to the original user of the products manufactured by Kryptonite (the "Products") against defects in material and workmanship.

### WHAT KRYPTONITE WILL DO:

Upon return of the defective Product to Kryptonite or its authorized distributor for inspection, free and clear of all liens and encumbrances and accompanied by the statement of defects and proof of purchase, Kryptonite will replace the Product.

### ORIGINAL USER:


This warranty only applies to the Original User of Products. This warranty is not transferable.

### WHAT IS NOT COVERED:

The following costs, expenses and damages are not covered by the provisions of this limited warranty: (i) labor costs including, but not limited to, such costs for the removal and reinstallation of Products; (ii) shipping and freight expenses required to return the Products to Kryptonite; or (iii) any other incidental, consequential, indirect, special and/or punitive damages, whether based on contract, warranty, tort (including, but not limited to strict liability or negligence), patent infringement, or otherwise, even if advised of the possibility of such damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you.

**The provisions of this limited warranty does not apply to Products: (i) that contain a Schlage® cylinder; provided, however the lock body is covered under this warranty (refer to specific Schlage Lock Company warranties for the cylinder); (ii) used for purposes for which they are not designed or intended; (iii) which have been subjected to alteration, misuse, abuse, negligence, or accident; (iv) which have been improperly stored, installed, maintained, repaired or operated; (v) which have been used in violation of written instructions provided by Kryptonite; (vi) which have been subjected to improper temperature, humidity, or other environmental conditions (i.e., corrosion); or (vii) which, based on Kryptonite's examination, do not disclose to the Kryptonite's satisfaction non-conformance to this warranty.**

### 2 Instructions For Setting (and Changing) Your Personal Combination

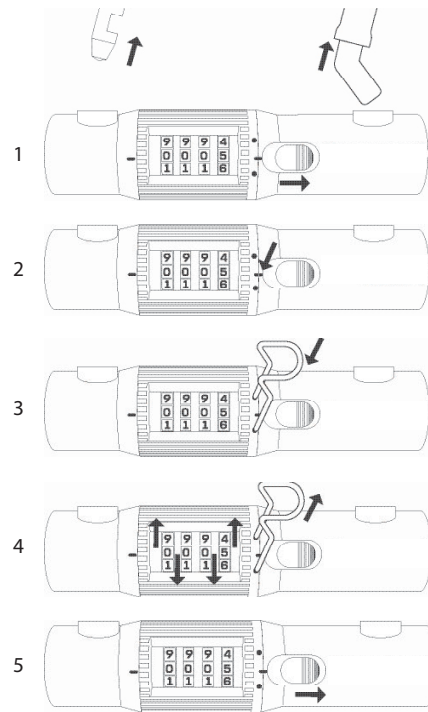

1. Rotate lock dials to combination (original factory setting is 0-0-0-5). Slide release button (a) on the crossbar to the right and hold while completely removing the U shaped shackle from the crossbar - leave it off for now.

2. The lock comes with the rotating dust cover in the open position. If the dust cover is not open, then rotate dust cover to the open position so that the combination dials are fully visible. You will feel a "click" once the rotating dust cover is fully open.

3. Make sure to line up the 2 holes (d) on the RIGHT side of the dust cover. When aligned, insert the setting tool (e) into the 2 small holes between the dials and the release button (a). Push in tool until you hear a "click" sound. NOTE: The release button (a) moves from the right to left and stays in this left position.

4. Remove setting tool (e) from the crossbar and set aside (do not move the release button (a) at this time). Rotate each dial to the new 4-digit combination of your choice. Use a number that will be easy to remember (such as a birth date) NOTE: Make sure the number you choose is correctly aligned with the reference marks (b & c) so that the dial is not in-between numbers!

5. Without moving the dials, push release button (a) back to the RIGHT side and listen for the "click" sound. Once you hear this "click", your lock is now set to your new personal combination code.

6. Re-Insert U shaped shackle fully into the crossbar. Test your lock to make sure the slide release button (a) can be pushed to the RIGHT and the U shackle can be removed. When this step is complete, the combination has been changed. NOTE: When transporting the lock it is recommended to scramble the dials to engage the locking mechanism.